

# MANUAL

## muraltex

### What do you need?



Screwdriver



Utility knife



Wallpaper spatula



Cutting ruler



Wallpaper brush



Pressing roller



Bucket

### Important Before Applying the Wallpaper:

- Let the wallpaper acclimate for 24 hours to prevent shrinkage.
- The optimal wallpapering temperature is between 18 – 25 °C with a humidity level of 40% – 65%.

### Plastered or new walls:

- If your walls are freshly plastered, treat them with primer.
- If the wall is new and untreated, it needs to be primed. Alternatively, you can paint the wall with white paint.
- These preparations ensure better adhesion of the wallpaper to the wall.

# 1


## Preparation

- Turn off the power to outlets and switches on the wall and remove the frames.
- Remove old wallpaper and ensure the wall is clean and smooth.
- Cover the floor with newspapers, cloths, or plastic sheeting.
- Set up a sturdy ladder to apply the wallpaper across the entire wall.
- Carefully remove the wallpaper from the box and check for any imperfections.

**Tip:** For the best results, ensure your wall has a uniform color.

# 2


## Gluing and Applying

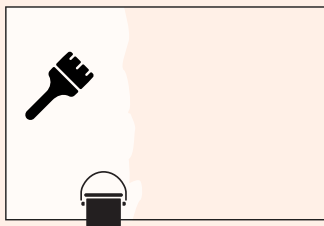

- Prepare the glue according to the glue manual.
- Apply glue thoroughly to the first 2-3 meters of the wall.

**Note:** If you added extra margin when ordering, center the wallpaper on the wall.

**Example:** With an extra margin of 3 cm, the wallpaper should extend 1.5 cm above and below. This provides extra margin if the ceiling or floor is uneven. The same applies for width margins.

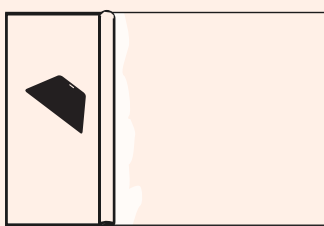

- Attach the wallpaper to the left side and press it firmly with the wallpaper spatula.
- If the wallpaper is misaligned, peel it off and start again.
- Once the first section is secure, apply glue to the next section and repeat all steps.

# 3

## Finishing



- Trim the edges of the wallpaper with the wallpaper spatula and cutting ruler.
- Press the wallpaper firmly with the pressing roller.

### Tips:

- Small air bubbles will disappear when drying. Large air bubbles can be pricked with a pin to release the air.
- Remove excess glue with a **dry cloth**.
- Ensure sharp folds at corners for easier trimming of excess wallpaper.